

RAMP KIT 1S CORNER

Height: 1,8 - 5,5 cm

Width: 25 cm Depth: 25 cm

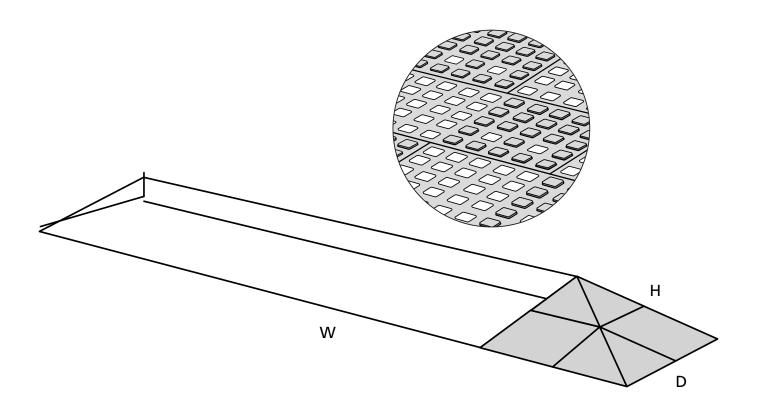

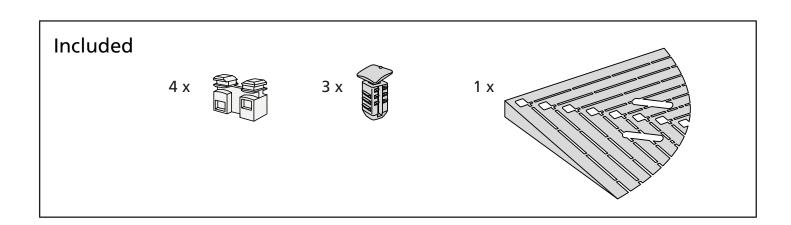









MOUNTING OF C-LOCKS ON THE RAMP

To connect a corner to a ramp, you have to mount c-locks in the ramp. If the ramp is already installed, you will have to remove the two upper layers.

CORNER RAMP ADJUSTER

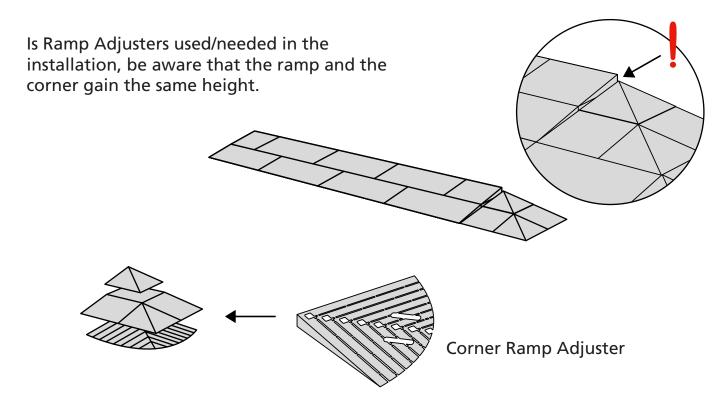

Corner Ramp Adjuster height adjustments:

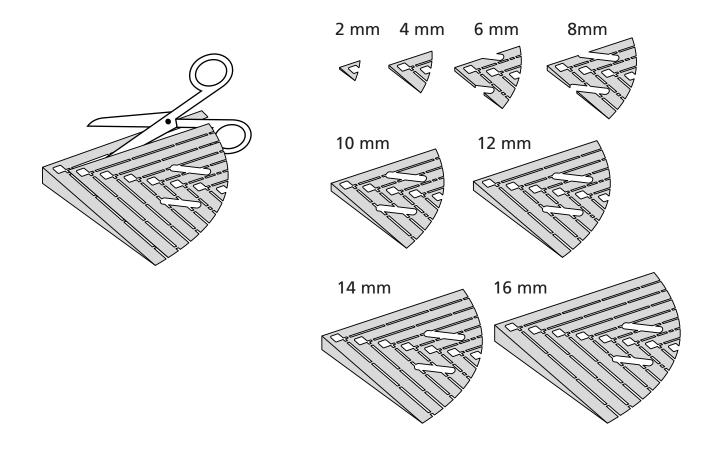

MOUNTING WITH LOCKS

